

To add or modify the devices on the Logitech remote, download the latest Logitech Harmony Remote Software at www.logitech.com and follow the instructions for installation, creating an account and directions to add or modify devices.

Control codes for the Rosen Aviation devices are already contained in the Logitech database. To add a new Rosen Aviation device to your Logitech remote, navigate to the Device setup page of the Logitech Harmony Remote Software (Figure 1) and follow the following steps:

- 1) Select the Device type. See Table 1 for the Device Type associated with each Rosen Aviation equipment type. For example, if you are adding Blu-ray #3 to your Logitech remote, you would select 'DVD' from the pull down list and then 'DVD' from the Device sub-menu.
- 2) Select the Manufacturer from pull down list. Select 'Rosen Aviation'.
- 3) Type in the Model number in the Model field. Table 1 lists the Model Number to enter for each Rosen Aviation device. For example, if you are adding Blu-ray #3 to your Logitech remote, you would enter '0602-2XX-3'.
- 4) Click the 'Next' button and follow the normal Logitech instructions for customizing options for the device.

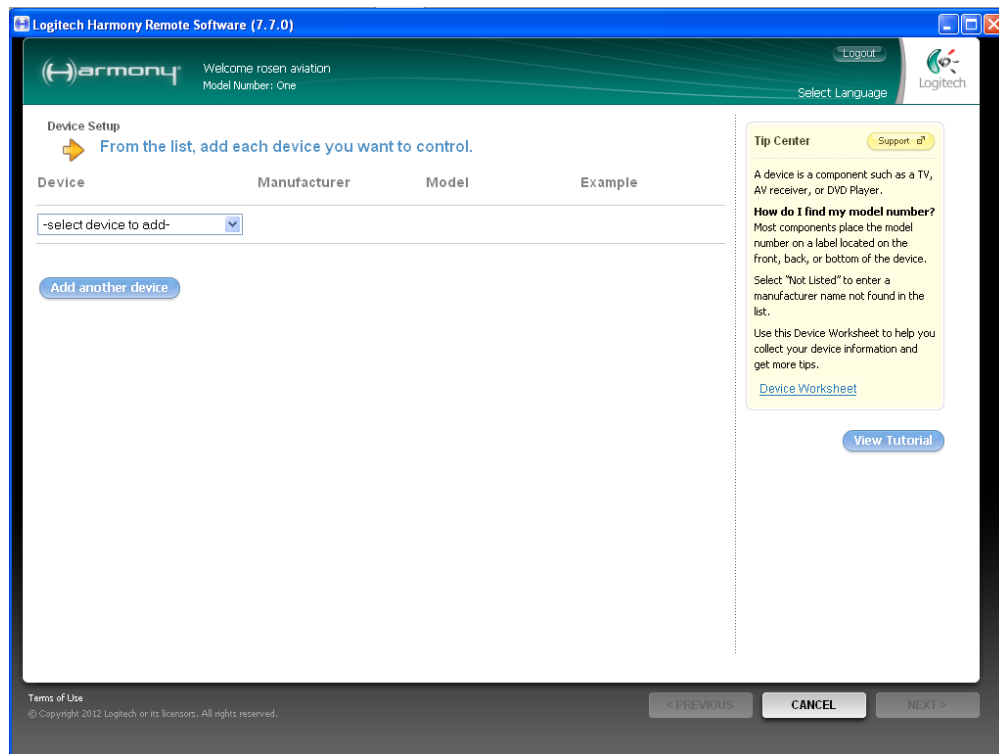


Table 1 – Rosen Aviation Devices

Equipment Type	Device Type	Manufacturer	Model Number
HD Monitor #1	Television/Monitor	Rosen Aviation	0700-1XX-1
HD Monitor #2	Television/Monitor	Rosen Aviation	0700-1XX-2
HD Monitor #3	Television/Monitor	Rosen Aviation	0700-1XX-3
HD Monitor #4	Television/Monitor	Rosen Aviation	0700-1XX-4
HD Monitor Master	Television/Monitor	Rosen Aviation	0700-1XX-0
10.4 Monitor	Television/Monitor	Rosen Aviation	1043-XXX
15 Monitor	Television/Monitor	Rosen Aviation	1500-003
17 Monitor	Television/Monitor	Rosen Aviation	1700-XXX
20 Monitor	Television/Monitor	Rosen Aviation	2002-XXX
24 Monitor	Television/Monitor	Rosen Aviation	2401-XXX
Blu-ray #1	DVD/DVD	Rosen Aviation	0602-2XX-1
Blu-ray #2	DVD/DVD	Rosen Aviation	0602-2XX-2
Blu-ray #3	DVD/DVD	Rosen Aviation	0602-2XX-3
Blu-ray #4	DVD/DVD	Rosen Aviation	0602-2XX-4
Blu-ray #5	DVD/DVD	Rosen Aviation	0602-2XX-5
Blu-ray #6	DVD/DVD	Rosen Aviation	0602-2XX-6
Blu-ray #7	DVD/DVD	Rosen Aviation	0602-2XX-7
Blu-ray #8	DVD/DVD	Rosen Aviation	0602-2XX-8
DVD #1	DVD/DVD	Rosen Aviation	0601-001-1
DVD #2	DVD/DVD	Rosen Aviation	0601-001-2
DVD #3	DVD/DVD	Rosen Aviation	0601-001-3
DVD #4	DVD/DVD	Rosen Aviation	0601-001-4
DVD #5	DVD/DVD	Rosen Aviation	0601-001-5
DVD #6	DVD/DVD	Rosen Aviation	0601-001-6
DVD #7	DVD/DVD	Rosen Aviation	0601-001-7
DVD #8	DVD/DVD	Rosen Aviation	0601-001-8
RosenView LX	Computer/Computer	Rosen Aviation	0603-001
RosenView VX	Computer/Computer	Rosen Aviation	0604-00X
XM Radio	Music Player/Radio Tuner	Rosen Aviation	0500-20X