

Audio Control Jack User's Guide

Operating the Audio Control Jack

Volume Control Knob

Turn knob from left to right to increase the volume, and from right to left to decrease it.

Note: The width of the audio swoosh indicates direction of the maximum and minimum volume.

Source Select

Push knob to switch between multiple audio sources. Pilot announcements will temporarily override all sources.

Headphone Jack

Plug in any standard 3.5 mm (1/8 inch) audio headphone jack.



1020 Owen Loop South
Eugene, OR 97402
1-888-668-4955
Fax: 541-342-4912

ROSEN
AVIATION

www.rosenaviation.com

© 2008, Rosen Aviation, LLC
Part Number: 102106 Rev B
Artwork per P/N: 100509 Rev A